



## troubleshooting

Lights flicker when off

Fan does not stop completely when off

Contactors does not open when off

- Remove the link wire to disable the locating ring—see “wiring” section



## ratings

Voltage 230VAC +/- 10%

Frequency 50Hz

Temperature 0°C to 35°C

Power 10A


Compliance BS EN60669-2-1 & BS EN55015



EU registered design no. 000638069-0003, 000638069-0004



**C.P. Electronics Ltd**  
Unit 2 Abbey Manufacturing Estate  
Mount Pleasant, Wembley  
Middlesex. HA0 1RR  
Tel: + 44 (0) 20 8900 0671  
Fax: + 44 (0) 20 8900 0674  
[www.cpelectronics.co.uk](http://www.cpelectronics.co.uk)  
[enquiry@cpelectronics.co.uk](mailto:enquiry@cpelectronics.co.uk)

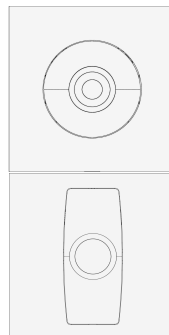

Part no.

 
GITLC

GITLT

- Single gang time lag switch
- Replaces a standard light switch or dimmer
- Suitable for lighting, heating or ventilation loads
- Turns on for adjustable time period
- Illuminated locating ring



If in doubt consult a qualified electrician.



Use the extender if there is less than 25mm free space.


REMEMBER—put the wires through the extender before connecting



LINK com L1

If the lights are controlled from one location only, wire as in the diagram.

Neutral		Black or Blue
Live		Red or Brown
Earth		Yellow Green
Strapper		Yellow or Grey

 

2. Remove switch cover

### 3. Lever out battery

#### 4. Replace battery

5. Push into holder


### 6. Replace switch cover

## 7. Replace front cover

## 8. Activate




- Before using, the unit needs to be activated.
- Press and hold the top button for more than 5 seconds. The red LED will flash to indicate that has activated and the unit will now operate.
- If the unit is going to be out of use for prolonged periods (more than 6 months) it should be de-activated by repeating the procedure above with the bottom button. This will help to prolong battery life.

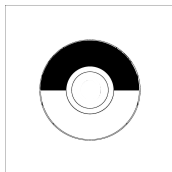

## 2 way switching


If more than one time lag switch is required to switch the lighting (e.g. At the top and bottom of a staircase) they can be wired in parallel, as in the diagram.

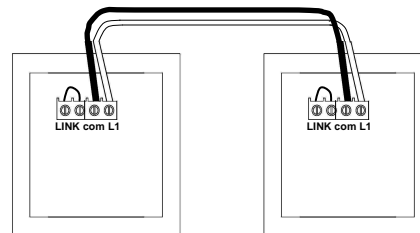



## Locating ring

The GITL comes with an LED locating ring which is used to locate the buttons at night. If the load does not turn off properly (e.g. **lamp flickers, fan continues to run, contactor does not open**) then the LED needs to be disabled. To achieve this, remove the link as shown below.

Remove link to  
disable LED  
locating ring

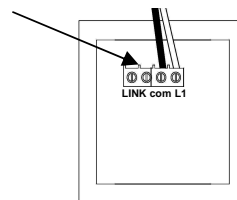


- The internal battery should last more than 5 years
- When it needs replacing, a red LED will flash on the front of the unit
- Follow the steps opposite to replace the battery
- Use only good quality, 9V alkaline batteries type PP3
- Once the battery has been changed activate the unit as described in the "activate" section.

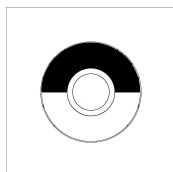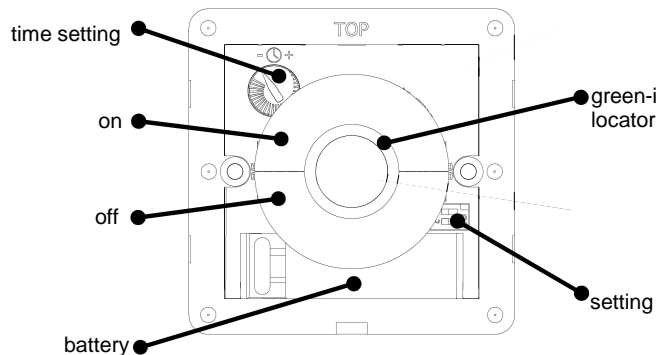


Short press—lights on for time period

Press for more than 5 seconds to activate (see Activate section).

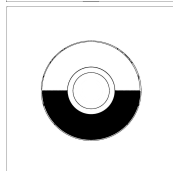


Short press—lights off

Press for more than 5 seconds to de-activate (see Activate section).

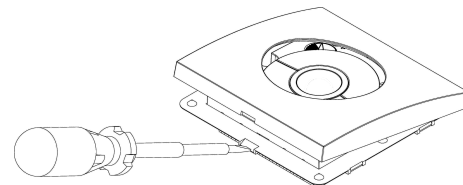




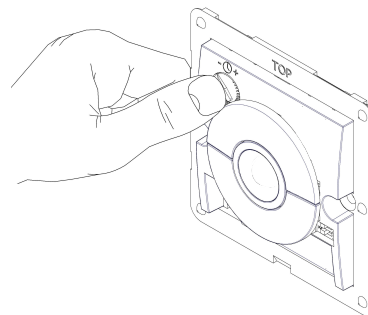

Remove front cover

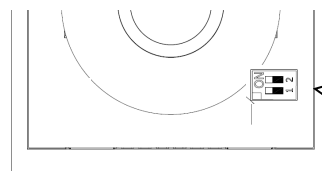

**Time setting**  
(determined by switch, see below)  
5 sec—15min  
15min—2hour

The lights will turn off after the time setting has finished. Clockwise = longer delay.



	Standard operation
	Bottom button de-activated. The lights will turn off automatically, but will not turn off manually.
	15min-2hour time range
	5sec-15min time range